

K6x5 / KDM PLUG

Assembly instructions

Assembly instructions for K6x5 plugs with single clip of type SAS to D



Drilling

Seating depth: 32 mm

Drill bit: SDS1

Purge the drilled hole.

Insert the pre-assembled clip and plug into the drilled hole.

Driving in

Place the setting tool "SMu 6-SM" or "SDS1" onto the "SDS1" drill bit.

Drive the plug into the drilled hole using the drill hammer.

Assembly instructions for KDM plug with Hermann clip



Drilling

Seating depth: 32 mm

Drill bit: SDS1

Purge the hole.

Insert the plug with a nut and washer through the Hermann clip and into the drilled hole.

Driving in


Place the setting tool "SWM-SM 50" onto the "SDS1" drill bit.

Drive the plug into the drilled hole using the drill hammer.

KDM / KMUF10 / KMUF12 PLUGS

Assembly instructions

Assembly instructions for KDM plug with 2970/2 SLD profile rail

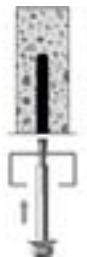

Drilling

Seating depth: 32 mm

Drill bit: SDS1

Purge the drilled hole.

Insert the plug with a nut and washer through the profile rail and into the drilled hole.

Driving in

Place the setting tool "SWM-SM" or "SWM-SM 50" onto the "SDS1" drill bit. Drive the plug into the drilled hole using the drill hammer.

Assembly instructions for KMUF10 / KMUF12 plugs



Drilling

Seating depth: 62 mm

Drill bit: SDS Duo set hv60

Purge the drilled hole.

Insert the plug into the drilled hole.

Driving in

Use a hammer and setting tool "SMu 10H" or "SMu 12H" to drive the plugs until they are flush.

1. Background Information

2. By Installation Type

3. By Cable Type

4. Product Range


5. Assembly Instructions

6. FAQ

LF8 PLUG / HMS INSTALLATION BOLT

Assembly instructions

Assembly instructions for LF8 plug

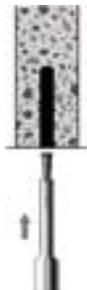

Drilling

Seating depth: 42 mm

Drill bit: SDS2

Purge the drilled hole.

Insert the plug into the drilled hole.

Driving in

Place the setting tool "SMu 6-SM" onto the "SDS2" drill bit.

Drive the plug into the drilled hole using the drill hammer

Assembly instructions for HMS installation bolt and single clips of type SAS to D



Drilling

Seating depth: > 30 mm

Drill bit \varnothing : 4 mm

Purge the drilled hole.

Insert HMS bolt through SAS clip up to the drilled hole.

Bolt into place

using T-drive "20"